

# Table of Contents

<b>Chapter 1 Introduction .....</b>	<b>1</b>
Image and Video Capture .....	1
<b>Chapter 2 Introducing the AVerTV Application .....</b>	<b>2</b>
Launching the AVerTV application .....	2
Introducing the User Interface .....	5
The Control Panel .....	6
Setting for Power Option .....	7
Setting time for turning on the AVerTV Application .....	8
Resizing the TV Monitor Window .....	9
<b>Chapter 3 TV .....</b>	<b>10</b>
Selecting Between TV Signals (air/cable) or Channel Groups .....	10
Adding and Deleting Channel Groups .....	10
Memorizing TV Channels .....	11
Skipping Unwanted Channels .....	13
Selecting a TV Channel .....	13
Specifying a Channel Name or Description .....	14
Changing the TV Channel Order .....	14
Locking and Unlocking a TV Channel .....	15
Adjusting Volume .....	17
Using the OverScan Function .....	17
16-Channel Preview .....	18
Selecting Between TV and External Video .....	19
Setting the Video Format of External Video .....	19
Modifying TV Channel Frequencies .....	20
Fine tuning Color and Display Quality .....	20

<b>Chapter 4 Image Capture.....</b>	<b>22</b>
Before Capturing.....	22
Capturing a TV/ Video Image .....	22
Multiple Image Sequence Capture .....	25
<b>Chapter 5 Teletext (for PAL System) .....</b>	<b>26</b>
Overview .....	26
Toolbar Buttons.....	27
LED Lamp .....	28
Using Teletext .....	29
<b>Chapter 6 Time Shift .....</b>	<b>32</b>
Time Shift Controls .....	32
Customizing Time Shift Settings.....	33
Using the Time Shift Function.....	34
<b>Chapter 7 DVR .....</b>	<b>35</b>
DVR Controls .....	35
Recording programs or video .....	35
Playing the recorded programs or video.....	36
Setup.....	37
<b>Chapter 8 FM Radio (Option).....</b>	<b>44</b>
FM Radio Controls .....	44
How to Auto Scan FM Radio Channels .....	45
Manually Scanning Specific FM Channels .....	45
Channel Versus Frequency Selection .....	46
Selecting a Channel.....	46
Selecting a Radio Frequency.....	47
Skipping Unwanted Channels.....	47
Saving a Radio Frequency to a Channel.....	48



Modifying or Adding FM Radio Channels .....	48
Changing the FM Radio Channel Order .....	49
Setting the Audio Mode .....	49
Adding and Deleting Channel Groups .....	50
Tuning the FM Radio Frequencies .....	51
Specifying the Tuning Increment .....	51
Playing the Recorded Audio .....	52
Using the FM Time Shift Function .....	53
<b>Chapter 9 Scheduler.....</b>	<b>55</b>
Adding and Deleting Schedules.....	56
<b>Chapter 10 Hot Keys .....</b>	<b>58</b>
<b>Chapter 11 Customer Service.....</b>	<b>60</b>

# Chapter 1 INTRODUCTION

Convert your computer system into a real multimedia entertainment center with **AVerMedia® AVerTV series!** Now you can watch television, video conference, and capture still images and video on your PC. If you purchase **AVerTV card** with FM capability, you can also listen to FM radio.

Surely, you'll never miss your favorite ball games, soaps or game shows anymore. Because **AVerMedia® AVerTV** comes with a scheduler wherein you can configure to show or record your preset TV programs or FM radio broadcasts whenever they are aired.

## Image and Video Capture

 
You can also capture still images and full motion video. Record television programs or other clips in a snap.

# CHAPTER 2 INTRODUCING THE AVerTV Application

The AVerTV application allows you to watch TV or video, record still or motion video, and listen to FM radio on your PC while you work on your computer.

## Launching the AVerTV application

Run the AVerTV application from the Programs menu.

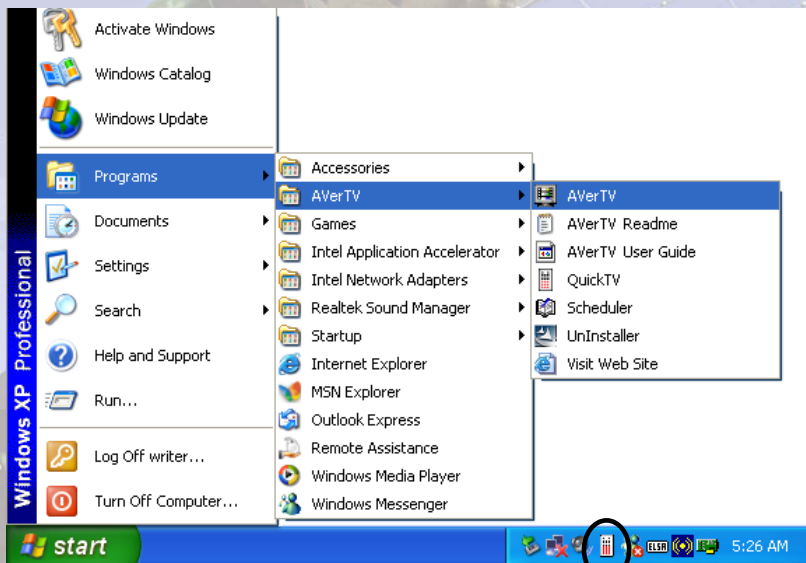

Quick TV Launcher

 
To run the application, click **Start**, select **Programs**, choose **AVerTV**, and then click **AVerTV**. Another way is to double-click the **AVerTV**



program icon on the desktop. Or, double-click the **Quick TV** launcher located at the lower right corner of the screen.

If you are running the application for the first time, a configuration dialog box will appear, prompting you to adjust settings for your **AVerMedia® AVerTV** card.


The configuration dialog box first displays the **Video** tab where you are prompted to choose a video capture device driver.

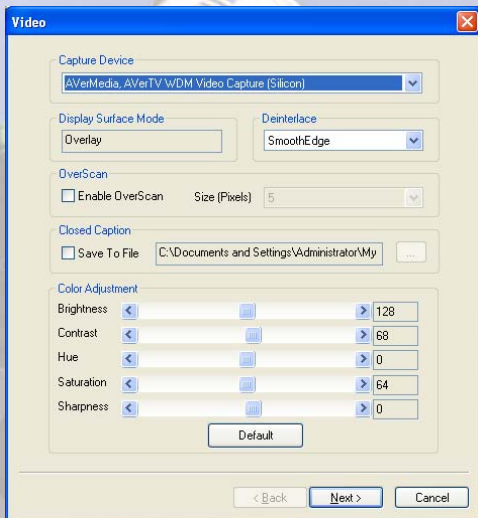

Your **AVerTV** card's video capture driver is already selected by default. If you have other TV tuner or capture devices installed in your system, you can switch to another driver by selecting it from the drop-down list. To adjust TV display settings such as brightness and contrast, drag the slider bars until you get the best display results. If there is closed caption on the TV program, you can enable saving of closed caption.

Enable the OverScan feature if you would like to hide the borders of the TV/video images while watching the TV/video programs. For more details, refer to *Using the OverScan Function* in Chapter 3.

 When you click **Next**, the **Audio** tab is displayed.

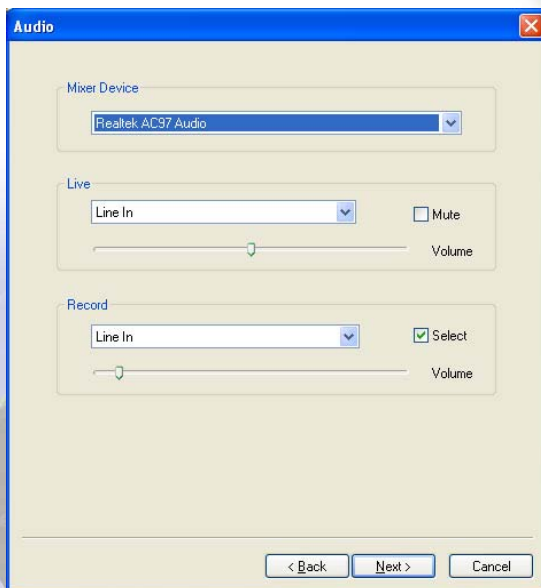

You need to choose the *appropriate* audio option respectively in the **Live** and **Record** section; otherwise, NO SOUND CAN BE HEARD OR recorded when you are watching or recording TV programs. Choose the audio output for your tuner card, depending on the cable connection you have between your tuner card and sound card.

☒ **Note:**

If you purchase the product with DirectSound support, you don't have to make any setting on the *Audio* tab.

When you click **Next**, the **Channel** tab is displayed. If this is your first time to use the AVerTV application, you need to search for all available TV channels in your area. Select the **Ant.** option to search only for air channels, or select **CATV** to scan for cable channels. Then click the **Channel Scan** button to start searching and memorizing channels. (Refer to the section titled **Memorizing TV Channels** for more details.)

## Introducing the User Interface

The **TV monitor** allows you to watch live TV or video.

 


The **Control Panel** provides button controls for selecting channels, changing between TV and external video source, capturing images, and more. It has a panel display that shows the current active video source (e.g. TV, Composite or S-Video), channel number, and other indicators.

To display the **Control Panel**, click the button located at the lower left corner of the TV Monitor.



# The Control Panel

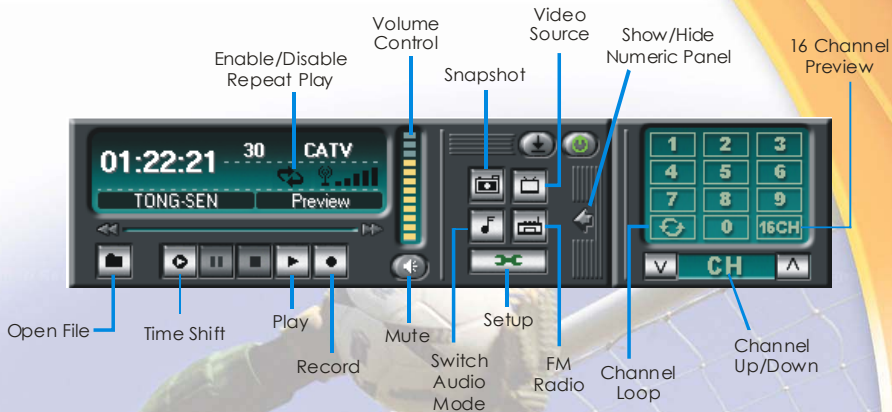

The table below describes what the button controls on the Control Panel are used for.

BUTTON	FUNCTION	BUTTON	FUNCTION
Setup	Allows you to: <ul style="list-style-type: none"> <li>* Fine tune TV display and audio settings.</li> <li>* Tune into air/cable TV.</li> <li>* Autoscanner channels.</li> <li>* Lock/unlock channel.</li> <li>* Create channel groups.</li> <li>* Configure snapshot settings.</li> <li>* Customize recording settings.</li> </ul>	Video Source	Change to view TV or video from a Composite or S-Video source.
Enable/Disable Repeat Play	Continuously play back the files in the playlist.	Open File	Create a playlist of video files to playback.
Mute	Turn off the sound.	Show/Hide Numeric Panel	Toggle between displaying or hiding the Numeric Panel.

BUTTON	FUNCTION	BUTTON	FUNCTION
Volume Control	Drag your mouse up/down to increase/decrease the volume level.	Switch Audio Mode	Choose between the available types of audio.
Record	Record the current TV show.	FM Radio	Switch to listening to FM radio.
Time Shift	Performs background recording of the live TV program. This function lets you view the recorded parts, while at the same time, recording is in progress.	16 Channel Preview	Display 16 consecutive TV channels on the TV Monitor window.
Snapshot	Capture a single image or a sequence of images.	Channel Loop	Return to previously accessed channel.
Play	Play back recorded video files.	Channel Up/Down	Go to the next upper or lower active channel.

## Setting for Power Option

While you will be away from the computer, you can set the time to turn off the computer or put your computer in Standby or Hibernate mode.

### ☒ Note:

 
Standby--Standby is a state in which your monitor and hard disks turn off, so that your computer uses less power.

Hibernate--Hibernation is a state in which your computer shuts down to save power but first saves everything in memory on your hard disk.

There are two ways to complete the setting:

- Press the **Sleep** button (the blue one) on the remote control and a dialog box will be then displayed on lower right corner of the screen.

Press the **Sleep** button continuously until

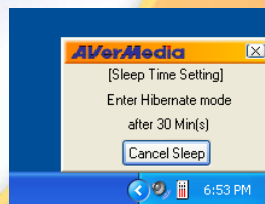


you get the desired power option. (For more information, please refer to the table below.) Then a countdown clock in the dialog box will remind you how much time remains.

To abort the setting, just click the **Sleep** button again.

OR,

 - Right-click on the TV monitor, point to **Sleep**, and choose the power option and an optimal execution time.

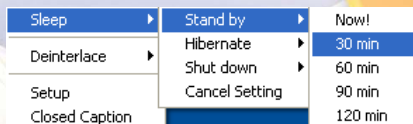

	Description
Cancel Sleep	Disable the <b>Sleep</b> function.
Enter Standby mode after 30/60/90/120 min (s)	Your computer will go into Standby mode in 30/60/90/120 minutes.
Enter Hibernate mode after 30/60/90/120 min (s)	Your computer will go into Hibernate mode in 30/60/90/120 minutes.
Enter Power off mode after 30/60/90/120 min (s)	Your computer will be turned off in 30/60/90/120 minutes.

## Setting time for turning on the AVerTV Application

This function allows you to turn on the AVerTV application at a preset time.

1. Press the **Wake Up** button (the green one) on the remote control.
2. A dialog box will be displayed on the center of the screen.
3. Set the time you want by pressing the **Wake Up** button continuously. (For more information, please refer to the table below.) Then the AVerTV application will be turned on automatically at the time you want.




	Description
Cancel Wake Up	Disable the <b>Wake Up</b> function.
Wake Up after 30/60/90/120 min(s)	The AVerTV application will be turned on in 30/60/90/120 minutes.

 
## Resizing the TV Monitor Window

To enlarge or reduce the size of the TV Monitor window, click and drag the lower right edge of the window.

Double-click the TV Monitor window to display it in full screen.

When in full screen mode, click  or double-click anywhere on the screen to revert to the normal TV window size.

To make the TV Monitor window float over the top of other program windows, right-click on the TV Monitor, choose **Video Screen** and make sure **Always on Top** is checked.

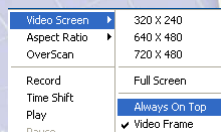

# CHAPTER 3 TV

## Selecting Between TV Signals (air/cable) or Channel Groups





Click the **Setup** button then click the **Channel** tab to choose whether to watch air TV (**Ant.**) or cable (**CATV**). If you have added one or more channel groups, you can also select a group. (Refer to the next section titled **Adding and Deleting Channel Groups** for more details.)

 
## Adding and Deleting Channel Groups

If you want to add or delete a channel group, do the following:

To add a new channel group:

1. Click the **Setup** button . In the *Setup* dialog box, click the **Group** tab.
2. Select the **Enable Group** option. The *New Group Name* dialog box will then appear.
3. Type in a group name and click **OK**.
4. Choose between **Ant.** (for air) or **CATV** (for cable).
5. Available channels will then be listed in the *Channel* column under the **Original Program** section. To select more than one channel, hold down the Ctrl key and then click each of the channels you want..


Then, click  to add your selection to the *Channel* column under the **Selected Program** section.

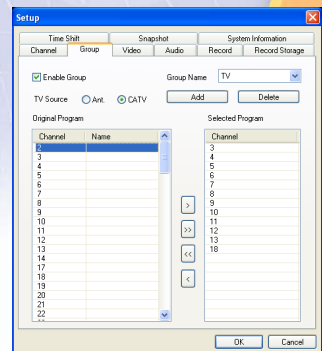




6. To add more groups, click **Add** and repeat steps 3 to 5.

To delete a channel group:

 
1. Click the **Setup** button . In the *Setup* dialog box, click the **Group** tab.
2. From the *Group Name* drop-down list, select the name of the group you want to remove.
3. Click **Delete** to remove the selected group.



## Memorizing TV Channels

Auto-scan will search and memorize all available channels in your area. In the **Channel** tab of the *Setup* dialog box, all scanned and memorized channels are check marked. If you haven't done channel scanning when you first started using the application, simply follow the auto-scan procedure below. (Refer to the next section titled **Skipping Unwanted Channels** for more detailed information to exclude selected channels.)

 
To auto-scan TV channels:

1. Click the **Setup** button  and click the **Channel** tab.
2. In the *Video Source* drop-down list, make sure the **TV** option is selected. Then select **Ant.** to search for air channels or select **CATV** to scan for cable channels.
3. From the *Country* drop-down list, choose your region.
4. Click **Channel Scan** to start the searching process.

The application has a default frequency table. When you click **Channel Scan**, the application will use the frequencies in this table and search for active channels. Active channels will then be memorized by the application.

5. You can terminate the searching process anytime. Just click **Stop**.
6. Check and verify that you can access all the TV channels. (Refer to the section titled **Selecting a TV Channel** for more detailed information regarding channels access.)

7. If there are channels missing from the channel memory, click **All Frequency Scan** and the following message will appear:

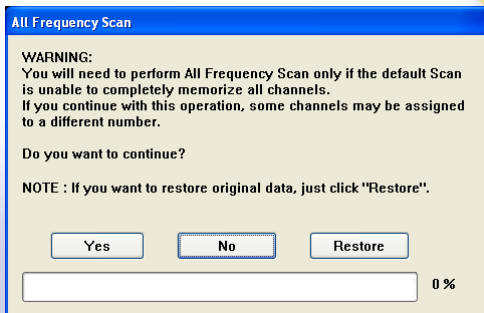


8. Click **Yes** to start all frequency auto-scan. The application will then scan frequencies starting from 54 MHz to over 800 MHz, increasing by 0.5 MHz at a time. The application will check these frequencies for active channels.

Wait for the application to finish the all channel scan process or in the *All Frequency Scan* dialog box, click **Stop** to terminate the searching process.

9. If you change your mind and want to revert to the default frequency table, click **All Frequency Scan** again and choose **Restore**.

## Skiping Unwanted Channels


If you want to exclude undesirable channels from your channel list, do the following:

1. Click the **Setup** button  and click the **Channel** tab.
2. In the *Channel* column, click the unwanted channel. The check mark will be removed, indicating that the channel will be excluded from your channel list and that you won't be able to access and watch them through the **Channel Up/Down** button.

Channel	Lock	Name
<input checked="" type="checkbox"/> 3	UnLock	News Channel
<input checked="" type="checkbox"/> 4	UnLock	
<input type="checkbox"/> 5	UnLock	
<input checked="" type="checkbox"/> 6	UnLock	

## Selecting a TV Channel

There are three ways of switching between TV channels:

- Click the **Channel Up/Down** buttons repeatedly until you reach your desired channel.
- Click  to open the *Numeric Panel* (as shown at right). Then click on the **Numeric buttons** to get your desired channel number.

 


OR,

- Click the **Setup** button  and click the **Channel** tab.


Under *Channel List*, simply click on the desired channel.

You will need to perform fine-tuning only if the reception of the selected channels is not clear. You can either click the **Auto Tune** button or manually adjust the **Fine Tune** slider to get a clear TV picture.



## Specifying a Channel Name or Description

To assign a channel name or specify a description:


1. Click the **Setup** button  and click the **Channel** tab.
2. Under the *Name* column, double-click the text box of the channel you want to assign a name or description.
3. Type in the channel name or description, then press **Enter**.

Channel	Lock	Name
<input checked="" type="checkbox"/> 3	UnLock	News Channel
<input checked="" type="checkbox"/> 4	UnLock	
<input type="checkbox"/> 5	UnLock	

Channel	Lock	Name
<input checked="" type="checkbox"/> 3	UnLock	News Channel
<input checked="" type="checkbox"/> 4	UnLock	Movie Channel
<input type="checkbox"/> 5	UnLock	

## Changing the TV Channel Order

You may change the sequence of TV channels in the channel list as you prefer.


4. Click the **Setup** button  and click the **Channel** tab.
5. Click on the channel which you want to move upward or downward.
6. Click the **UP** or **DOWN** button at the right side until the selected channel moves to the desired location.
7. Click **OK** to exit the dialog box.

Channel	Lock	Name
<input checked="" type="checkbox"/> 1	UnLock	
<input checked="" type="checkbox"/> 2	UnLock	
<input checked="" type="checkbox"/> 3	UnLock	News Channel
<input checked="" type="checkbox"/> 4	UnLock	Movie Channel
<input checked="" type="checkbox"/> 5	UnLock	
<input checked="" type="checkbox"/> 6	UnLock	
<input checked="" type="checkbox"/> 7	UnLock	
<input checked="" type="checkbox"/> 8	UnLock	
<input checked="" type="checkbox"/> 9	UnLock	

## Locking and Unlocking a TV Channel


You may lock out certain TV channels (e.g. adult channels) if you want to prevent others from watching them.

To lock a TV channel:

1. Click the **Setup** button  and click the **Channel** tab.
2. Under the *Lock* column, double-click the “UnLock” item of a TV channel that you want to lock.

Channel	Lock	Name
<input checked="" type="checkbox"/> 3	UnLock	News Channel
<input checked="" type="checkbox"/> 4	UnLock	Movie Channel
<input checked="" type="checkbox"/> 5	UnLock	
<input checked="" type="checkbox"/> 6	UnLock	

3. The *Channel Lockout* dialog box will then appear.

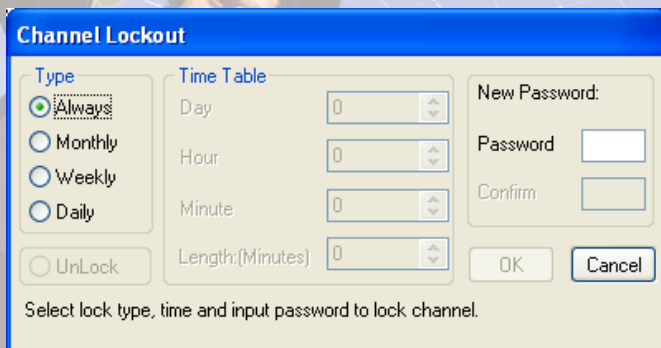


The Channel Lockout dialog box has a blue title bar and a light gray body. It is divided into three main sections. The left section, titled 'Type', contains four radio buttons: 'Always' (selected), 'Monthly', 'Weekly', and 'Daily'. Below these is an 'UnLock' button. The middle section, titled 'Time Table', contains four spin boxes for 'Day', 'Hour', 'Minute', and 'Length:(Minutes)', each with a value of '0'. The right section, titled 'New Password:', contains two text boxes for 'Password' and 'Confirm'. At the bottom right are 'OK' and 'Cancel' buttons. A footer text at the bottom reads: 'Select lock type, time and input password to lock channel.'

 
4. Choose the lock **Type**, that is, how often you would like to lock out the TV channel. There are four types to choose from:
  - Choose **Always** if you want to lock out the TV channel all the time.
  - Choose **Monthly** to lock out the channel once a month, at a preset day.



- Choose **Weekly** to lock out the channel once a week, at a preset day and time.
  - Choose **Daily** to lock out the channel everyday at a preset time.
5. If you selected **Monthly**, **Weekly** or **Daily**, you will need to set the **Time Table**:
    - Set the **Day** of the month or week for when to lock out the channel (only if you selected **Monthly** or **Weekly**).
    - Choose the time to lock out the channel by adjusting the **Hour** and **Minute** settings appropriately.
    - Set the **Length** of time (in units of minutes), that is, how long the TV channel will be locked out.
  6. Type a **Password** to use for unlocking the TV channel in the future.
  7. Type the same password again to confirm.
  8. Click **OK** to accept the new settings, or click **Cancel** to revert back to the original settings.


To unlock a TV channel:

1. Click the **Setup** button  and click the **Channel** tab.
2. From the channel list, click the locked channel. The *Password Confirmed* dialog box will then appear. (See figure at the right.) In the *Confirm* text box, type in the password for accessing the channel and click **OK**.
3. To unlock that channel, under the *Lock* column, double-click the “Lock” item.

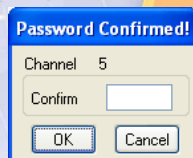

Channel	Lock	Name
<input checked="" type="checkbox"/> 3	UnLock	News Channel
<input checked="" type="checkbox"/> 4	UnLock	Movie Channel
<input checked="" type="checkbox"/> 5	Lock	
<input checked="" type="checkbox"/> 6	UnLock	

4. The *Channel Lockout* dialog box will appear:

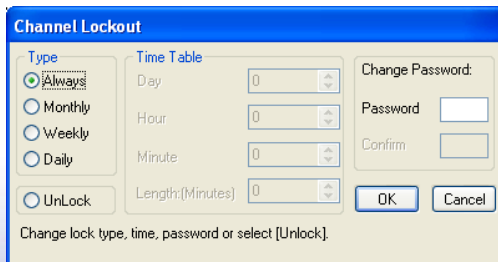The 'Channel Lockout' dialog box has a blue title bar. It contains two main sections: 'Type' and 'Time Table'. The 'Type' section has radio buttons for 'Always' (selected), 'Monthly', 'Weekly', 'Daily', and 'Unlock'. The 'Time Table' section has input fields for 'Day', 'Hour', 'Minute', and 'Length:(Minutes)', all set to '0'. To the right is a 'Change Password' section with 'Password' and 'Confirm' text boxes. At the bottom are 'OK' and 'Cancel' buttons. A footer text reads: 'Change lock type, time, password or select [Unlock].'

5. Select **Unlock**, and then click **OK**.

### Notes:

- Please use at least four alphabetical and/or numeric digits as your password.
- It is important to remember your password. You won't be able to unlock a channel or change the password without your current password. If you forget your password, you must reinstall the application.

## Adjusting Volume



 
On the TV Control Panel, click and drag your mouse over the **Volume** meter to increase or decrease the volume level. You can also press the + and – keys to adjust the volume.

## Using the OverScan Function

Sometimes the TV/video pictures may be distorted at the edges. You can enable the **OverScan** feature to hide the four borders of the TV/video frames.


To hide the edges of the picture:


- Right-click on the TV Monitor and choose **OverScan**

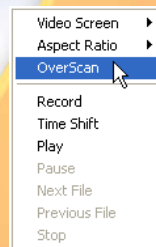


to have it checked.

OR,

 - Click the **Setup** button  and click the **Video** tab. Then enable the **Enable OverScan** check box and select the width (in pixels) you'd like to hide from the Size (Pixels) drop-down list.




## 16-Channel Preview

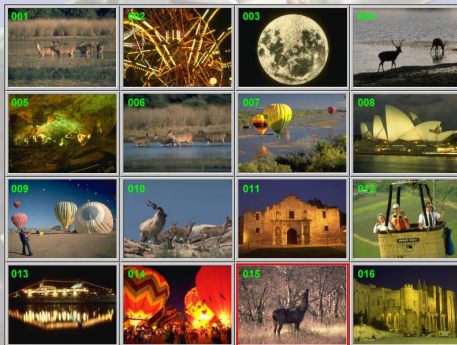 

The 16-channel preview function can display 16 TV channels on-screen at the same time. You can see clearly which TV programs are currently showing on these channels.

To preview the channels:

1. Click the **16 Channel Preview** button .
2. The screen will be gradually filled up with 16 TV channels, starting from the currently selected channel.
3. Click a channel to view it only and freeze the other channels.
4. To display a channel on the TV Monitor window, select any one of the 16 channels on-screen and double-click the left mouse button on that channel, or use the arrow ↑, ↓, ←, or → buttons of your

keyboard then press **Enter**. You will then be tuned in to that channel. (Or, Click the right mouse button or press **ESC** to return to the originally selected TV channel.)


## Selecting Between TV and External Video




If you want to watch video from an external source such as a VCR or camcorder, click the **Change Video Source** button to switch between watching TV, a Composite video source, and S-Video source.

## Setting the Video Format of External Video

To set the video format used by the external video source, do the following:

1. Click the **Setup** button  and click the **Channel** tab.
2. From the *Video Source* drop-down list, choose the type of external source: Composite or S-Video.

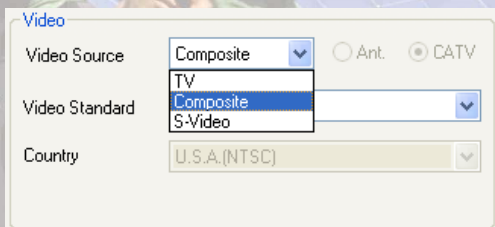


Video

Video Source: Composite (dropdown menu) ☐ Ant. ☒ CATV

Video Standard: Composite (dropdown menu) S-Video (dropdown menu)

Country: U.S.A.(NTSC) (dropdown menu)

3. From the *Video Standard* drop-down list, select the proper video format.

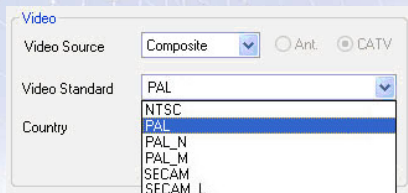

Video

Video Source: Composite (dropdown menu) ☐ Ant. ☒ CATV


Video Standard: PAL (dropdown menu) NTSC (dropdown menu)

Country: U.S.A.(NTSC) (dropdown menu)

## Modifying TV Channel Frequencies

It is not recommended to edit the frequencies of TV channels unless you are very familiar with local TV frequencies.

To edit the TV frequencies:

1. Click the **Setup** button  and click the **Channel** tab.
2. In the **Channel List** section, drag the horizontal slider rightward to the end.
3. Double click over the channel frequency that you want to modify, type the desired frequency, and then press **Enter**.

Name	Frequency
	55.25
News Channel	61.25
Movie Channel	67.25
	77.25

4. Click **OK** to exit the dialog box.


## Fine tuning Color and Display Quality




If the color or picture quality of the TV/video display needs to be adjusted, click the **Setup** button and click the **Video** tab.

 To adjust the color of the TV or video picture, adjust the **Brightness**, **Contrast**, **Hue**, **Saturation** and **Sharpness** sliders until you get an accurate color. (If you change your mind and want to change back to the factory default settings, click **Default**.)



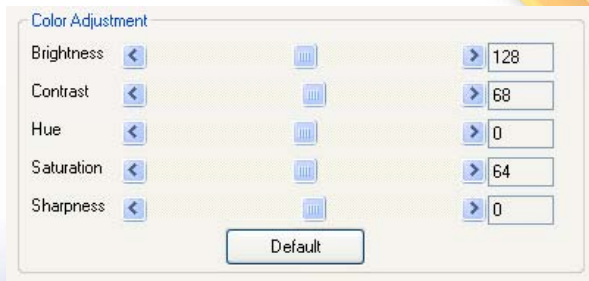

 The *Deinterlace* function can remove the jagged edges of images in serial rapid movements. It is recommended using this function to ensure smooth and clear video images. You can select either **Bob** or **SmoothEdge** to deinterlace the video image.

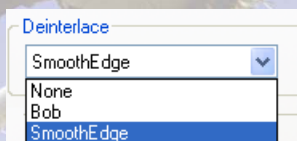

☒ **Note:**



**Bob** and **SmoothEdge** represent two different algorithms. Try both options to compare which one can give you the best picture quality.

# CHAPTER 4 IMAGE CAPTURE

While you watch live TV or video from your PC monitor, you can use the **AVerTV** application to capture images for your document, presentation or web page.

## Before Capturing

Before you start capturing images, first set the destination folder for saving captured images.

Click the **Setup** button  and then click the **Snapshot** tab. Click  to choose a folder where you want to save captured images.

## Capturing a TV/ Video Image




To capture a still image, click the **Snapshot** button. The *Album* will then appear, displaying thumbnails of the captured image.



To capture another image, click **Snapshot** again. New thumbnails and pages will be added to the *Album* as you capture more images.

 
To display the captured image on your desktop:

1. Select the thumbnail of the desired image then click the **Desktop Wallpaper** button .



2. The selected image will be displayed as your wallpaper, the background of your desktop.

To save the captured image:


1. Select the thumbnail of the image then click the **Save As** button . The *Save As* dialog box will then appear.

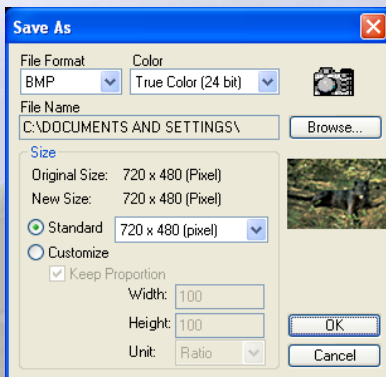

  2. From the *File Format* drop-down menu, select the format for saving the captured image.
3. Choose the *Color* format.
  - Choose 24-bit to capture image in 16M colors.
  - Choose 8-bit to capture image in 256 colors.

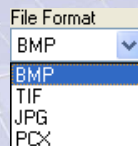


 4. Click **Browse** to scan for folders and select a destination location for saving the image. Then specify a file name for saving the captured image.

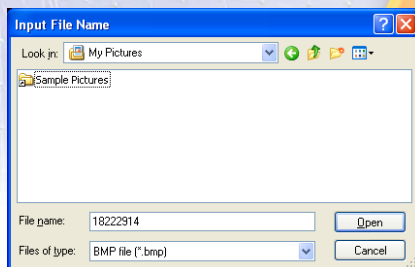


5. Choose the image size.

 - In the *Size* section, select the **Standard** option and choose a desirable image size from the drop-down list.

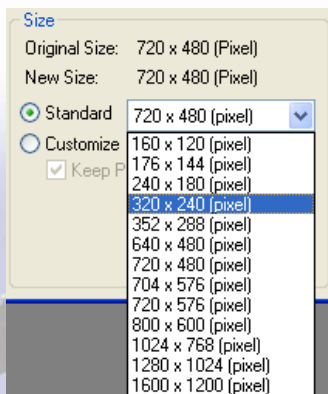

 - If you want to set your own image size, select **Customize** and enter the image **Width** and **Height**. If you want to maintain relative width and height, select the **Keep Proportion** option. Choose a measurement unit from the **Unit** drop-down list. You can specify any image size you want. The maximum capture size can be 1600x1200.

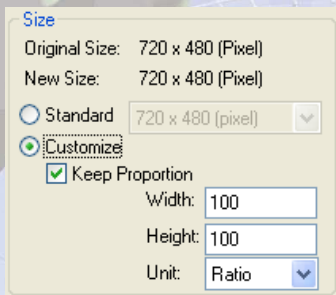


6. Click **OK** to save the image. Click **Cancel** if you do not want to save the image.

## Multiple Image Sequence Capture

 To capture a continuous sequence of images, do the following:

1. Click the **Setup** button  and then click the **Snapshot** tab.

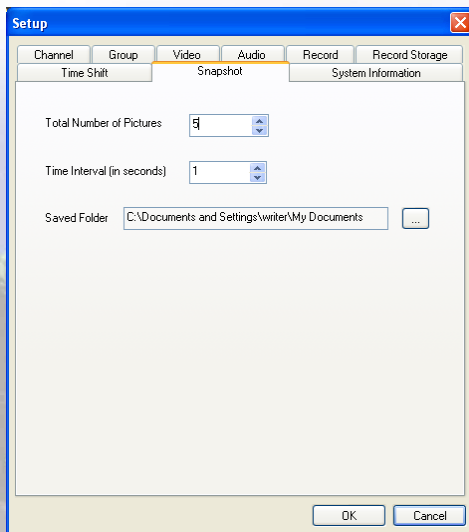

2. In the *Total Number of Pictures* box, specify the number of images you want to capture.
3. In the *Time Interval (in seconds)* box, specify the interval between captures. For instance, if you specify 10 seconds, an image will be captured every 10 seconds.
4. Click **OK** to save the new settings. Click **Cancel** if you do not want to change the settings.
5. Click the **Snapshot** button  to start capturing.




# CHAPTER 5 Teletext (for PAL System)

 Teletext makes TV viewing a unique experience. It views teletext broadcast from your television programs and get the most updated information on TV Schedules, News, Stock Market Prices, Concert & Theatre information and so on. Teletext information may not be available if there is no such service provided in your region or country.

## Overview

Click the **Teletext** button on the remote control to evoke the Teletext application as shown below.

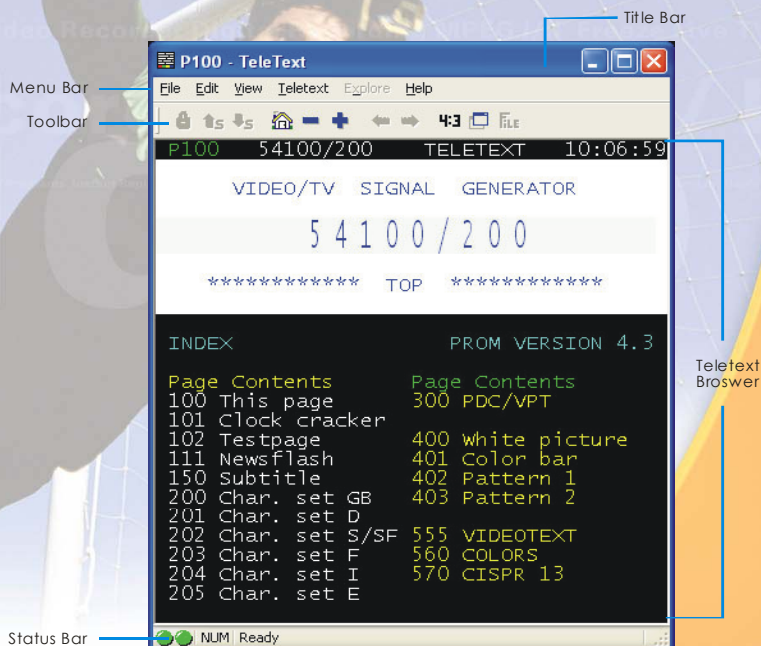

## Title Bar

This is located at the top of the window. It contains the current displayed page number or in hexadecimal page number of an active window.

## Menu Bar

This contains the names of the available pull-down list option menus. To access any of the menu items, simply click on it or press the Alt button and the underlined character.

## Toolbar

It includes buttons that gives quick access to perform certain frequently used functions from the **Menu Bar**.

## Teletext Browser

Teletext information is displayed in this area. The information would be the TV schedules, news, stock market reports, concert & theater information and so on.

## Status Bar

Status bar is located at the lower left corner of the window. It contains a short text message or explanation of the currently selected menu command.

## Toolbar Buttons



### Lock Sub page

Locks the current sub page. The upcoming transmitted sub pages will be stored in the Teletext Cache for later use.



### Previous Sub page/ Next Sub page

Switches to the next or the previous sub page.



### Home (Ctrl+H)

Connects to the teletext home page which always goes to page 100, but page 100 may not be the primary teletext source.



### **Previous Page (-) / Next Page (+)**

Displays the preceding or the succeeding teletext in hexadecimal page number.



### **History Back / History Forward**

Retrieves the previous page in the history list.



### **TV Scale**

Changes the proportion of the Teletext window to 4 by 3.



### **Always On Top**

Makes Teletext Window float over the top of other applications.



### **Teletext File**

Switches between the Teletext file which is opened from the previously saved file and the most recent Teletext information.

## **LED Lamp**

Different LED color indicates different state.

### **Left LED Lamp:**

Green -- The cache in Teletext application is running less than 90% usage.

Yellow -- The cache in Teletext application is running over 90% usage.

Red -- The cache in Teletext application is running out.

### **Right LED Lamp:**

Gray -- The system does not receive the teletext broadcast data.

Green -- The system is receiving the teletext broadcast data.

## Using Teletext

The following briefly describes how to use the Teletext feature.

### Teletext Page

There are two page numbers displayed on the first line of each teletext page. The page number on the left is the page number that you have selected or keyed in. The one appears in the middle of line is the page number of the currently displayed teletext data.

The newly selected page number will appear on the upper left corner of the page. Sometimes, this may take a short while to retrieve the newly selected teletext page. There will be no changes on the page when there is no page data transmitted with the number you have selected.

A teletext page can be selected with one of the following methods:

- Key in the hexadecimal or teletext page number using the numeric buttons of your keyboard or AVerMedia TV remote control.
- Press the + (positive) or – (negative) button to move to the succeeding or preceding teletext page.

 
### Copying a Teletext Page

1. Simply click and drag over the text or the area that you want to copy using the mouse.
2. Choose **Copy** from the **Edit** menu (*Alt+E, C*) or press *Ctrl+C*.
3. You can then paste the contents of the teletext page in TXT or BMP format to a document you are working with.

## Saving a Teletext Page

Some teletext pages include a number of subpages. If the file has subpages, teletext will also save the existing subpages.

1. A teletext page can be saved using one of the following ways:
  - To automatically save the file using the displayed teletext page as the filename and the default file format, choose **Save** from the **File** menu or press **Ctrl+S**.
  - To save the file by specifying your own filename and different file format, choose **Save As** from the **File** menu or press **Ctrl+A**.
2. A save as dialog box will appear:

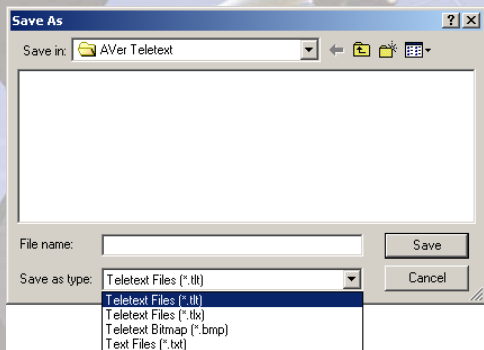


3. Select the file format to use for saving the teletext page. You can save the teletext page in:

<b>TXT</b>	Text file format
<b>BMP</b>	Windows bitmap file format
<b>TLT</b>	Teletext file format
<b>TLX</b>	Teletext file format
4. Enter a filename and click **Save**.



## Opening a Teletext Page

 1. Choose **Open** from the **File** menu or press *Ctrl+O*.
2. From the Open dialog box, select the file containing the teletext page you want and click **Open**.

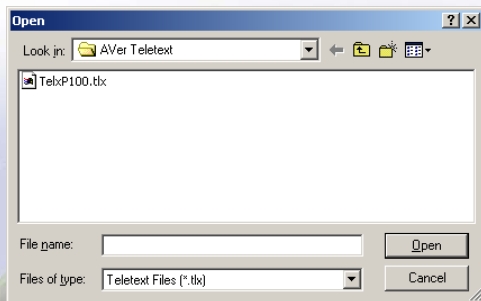

## Opening Another Teletext Window

To open another teletext window, choose **New Window** from the **File** menu or press *Ctrl+W*.

## Closing the Active Teletext Window

Choose **Close Window** from the **File** menu or press *Ctrl+L* to close the active teletext page window.

# CHAPTER 6 Time Shift

The Time Shift function performs background recording of a TV program, and lets you return and watch any part of the recorded program. At the same time, the live TV program continues to be recorded and played back so you won't miss any part of the show. You can also advance forward to skip commercials or rewind to replay scenes one more time.

## Time Shift Controls


Use the following button controls in the Control Panel to start recording a live TV program, play back the program from where you left off, advance forward, rewind, and more.

 



## Customizing Time Shift Settings

Before you start using the Time Shift function, first check its recording settings to see if they fit your needs.

To check and customize settings:


1. Click the **Setup** button  and then click the **Time Shift** tab. You will then see the following settings.

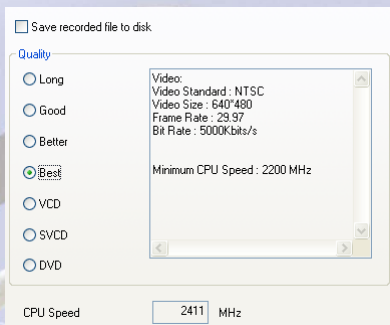


2. By default, Time Shift performs recording of the TV program by creating a temporary video file and deletes this file once you click the **Stop** button to switch off this function. If you want to save the video file, select the **Save recorded file to disk** option.
3. Select the video **Quality** that you want for the recorded program. When you click an option, details such as video size, frame rate etc. will be displayed in the box at the right. The minimum CPU speed required will also be shown for your reference. Make sure that your computer's CPU performance is fast enough and meets the requirement.
4. If you chose to save TV recordings as video files in step 2, set a destination folder for saving the files. Click the **Record Storage** tab, and under **Saved Folder**, click  to choose a folder in which to save the video files.
5. Click **OK** to apply the new settings, or click **Cancel** to use the original settings.




## Using the Time Shift Function

To pause the live TV program and then replay:

1. Click the **Time Shift** button . You can now leave your computer and let the application record the TV program.
2. When you're back and want to replay, use the **Playback Seek** slider bar to move back to the part where you left off. Click and drag the slider tab to the left until you see the part of the show where you were watching earlier, then release the mouse button to replay from there.



You can also click the **Backward** button  to move backward in fixed intervals until you reach the part where you left off.

3. To advance forward and skip some parts of the recording (for example TV commercials), drag the slider tab to the right. You can also click the **Forward** button  to move forward in fixed intervals.
4. To temporarily pause the playback, click the **Pause** button . Click the **Pause** button again to resume.
5. To return to real-time viewing of the live TV program, click the **Stop** button . This switches off the Time Shift function and returns you to live TV.

**Note:** If the TV recording was saved as a video file in a specified folder, you can play it back anytime you want. Refer to **Chapter 7 DVR** to know more on how to open and play back recorded video files.

# Chapter 7 DVR


You can use your computer as a digital video recorder, and record your favorite TV programs or capture video from an external source into your hard drive. Record programs or video in high-quality AVI, MPEG-1 or MPEG-2 file format. You can also save the recordings in VCD, SVCD or DVD format for burning on discs.

## DVR Controls






Use the following button controls for recording and video playback.

 


## Recording programs or video

Select a TV channel/program that you want to record. Whereas to record video, click  to switch to the Composite or S-Video source. Then follow the procedure below to record.



1. First, determine the length of recording you want to make and the destination folder where to save the recording. Click the **Setup** button  and click the **Record Storage** tab. Then specify a **Duration** or choose the **Unlimited** recording option. Click  to choose a destination folder. (Refer to the section titled **Setup** for more details.)
2. Next, determine the video file format to use for saving the recorded video files. Click the **Record** tab, then choose MPEG-1, MPEG-2, AVI, VCD, SVCD, or DVD format. (Refer to the section titled **Setup** for more details.)
3. Click the **Record** button  to start recording the current TV program or video.
4. If you want to hide both of the screen and sound of the TV program/video which is being recorded, right-click anywhere over the TV Monitor, and select **Silent Record**. To watch the TV program/video again, double click the **AVerTV** icon  in the lower right corner of the screen.
5. Wait until the recording time preset in **Duration** expires or click the **Stop** button  to end the recording.

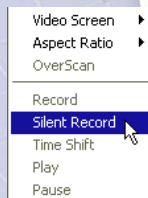


## Playing the recorded programs or video

Each TV program or video that you recorded will be saved as a video file in the assigned destination folder.

To play back the recorded video files:

- Click the **Play** button  to play back.
- OR,
- (1) Click the **Open File** button , then select **Open File List** to display the *Open File List* window. All the recorded files are listed at the bottom pane of the *Open File List* window. This is the default playlist of recorded files.

 - (2) To delete files from the playlist, select them from the list in the bottom pane and click **Delete**, or click **Delete All** to delete all files in the playlist.

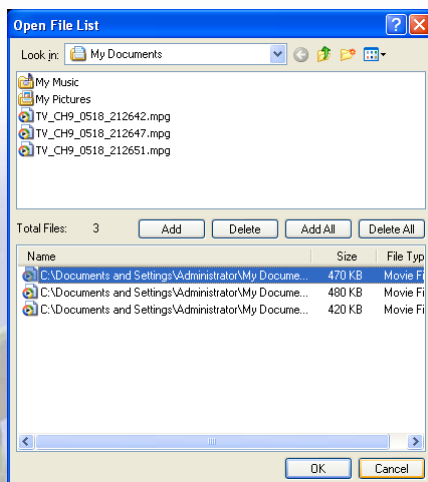

- (3) To add more video files to the playlist, first navigate the *Look in* field on the top pane to find the folder that contains the desired video files. When you have located the folder, the media files will then be displayed on the top pane. Select the files that you want, then click **Add**, or click **Add All** to add all media files in the folder to the playlist.
- (4) To start playback, simply click **OK**. The application will start playing each of the files in the playlist.

## Setup



The **Record Storage** and **Record** tabs in the *Setup* dialog box provide settings for customizing capture duration, file size, video format, and more.

## Record Storage Tab

**Setup**

Time Shift    Snapshot    System Information

Channel    Group    Video    Audio    Record    **Record Storage**

**Disk Information**

Drive	Free Space	Total Space	File System
C	7.46 GB	9.76 GB	FAT32
D	8.47 GB	9.76 GB	FAT32
E	27.38 GB	44.50 GB	FAT32
G	9.90 GB	10.48 GB	FAT32

**Record Time**

Maximum Available Time : 4 Hour(s) 12 Minute(s)

☐ Duration    0 Hour(s)    30 Minute(s)

☒ **Unlimited**

Split File Size : Maximum

**Saved Folder**

C:\Documents and Settings\writer\My Documents

OK    Cancel

### Recording Duration and File Size

Specify the desired length of recording. Select **Duration** and enter the time length in number of hours and minutes. Otherwise, if you do not have any specific time length requirement, select the **Unlimited** option. The application will record the largest clip that your hard disk can accommodate.


If you want to record programs or videos for burning to discs such as VCD or DVD, select the appropriate video file size for the target disc capacity so that each video file will not exceed the limit. Choose the file size from the **Split File Size** drop-down list.

Split File Size

Maximum


- Maximum
- VCD < 650M Bytes
- VCD < 700M Bytes
- VCD < 750M Bytes
- DVD < 4G Bytes

## Destination Folder

Under **Saved Folder**, click the **Browse** button  to choose a folder in which to save the recorded video files. (Video files will be named with default file names.)

## Record Tab

### Video Format and Video Standard

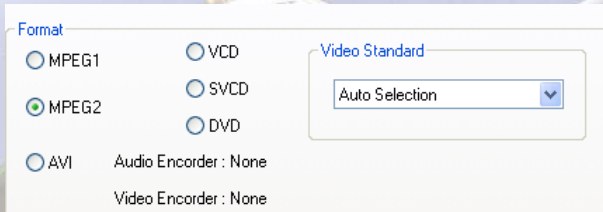

**Format**

☐ MPEG1 ☐ VCD

☒ MPEG2 ☐ SVCD

☐ AVI ☐ DVD

Audio Encoder : None

Video Encoder : None

**Video Standard**

Auto Selection

Under **Format**, select a video file format that you want to use for saving recorded programs or video. These are the available video formats:

- **MPEG-1**

Choose MPEG-1 format for video files that are intended for CD-ROM playback on a computer or for Internet transmission. MPEG-1 allows file compression and offers VHS quality picture. Almost every system available today can play MPEG-1 and does not need special software or hardware.

- **MPEG-2**

Videos compressed using MPEG-2 have extremely high quality pictures and full CD-quality sound. Choose MPEG-2 format for video files that are intended for DVD-ROM playback on a computer or if you want broadcast quality videos.

- **VCD**

When you choose this format, the recorded video file will be saved in MPEG-1 format that is compliant with VCD standards.

Standard VCD frame size and frame rate are 352 x 240 pixels at 29.97 fps for NTSC and 352 x 288 pixels at 25 fps for PAL.

- **SVCD**

When you choose this format, the recorded video file will be saved in MPEG-2 format that is compliant with SVCD standards. Standard SVCD frame size and frame rate are 480 x 480 pixels at 29.97 fps for NTSC and 480 x 576 at 25 fps for PAL.

- **DVD**

When you choose this format, the recorded video file will be saved in MPEG-2 format that is compliant with DVD standards. Standard DVD frame size and frame rate are 720 x 480 pixels at 29.97 fps for NTSC and 720 x 576 at 25 fps for PAL.

 
- **AVI**

AVI is the most common video file format for playback on the computer. It can be saved in uncompressed form if you want high quality video, or compressed using any of the available codecs if you want to minimize the file size.


From the *Video Standard* drop-down list, selecting **Auto Selection** allows the application to automatically set the video standard for recorded video files based on the video system used by the current video source (selected in the **Channel** tab).

To customize AVI setting, click the **Setting** button at the bottom of the *Setup* dialog box, and AVI's *Setup* dialog box will appear. You can choose a Video or Audio codec from the *Encoder* drop-down list.



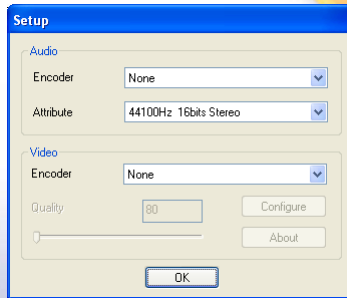

## Image Size, Frame Rate and Quality Settings

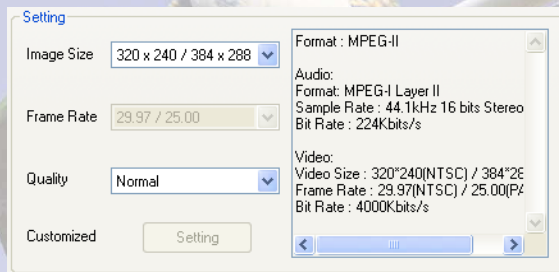 

The **Image Size**, **Frame Rate**, and **Quality** settings are enabled for selection depending on what video file format you have chosen for your video files.

- **Image Size**

Choose preset dimensions for your captured video from the drop-down list.

- **Frame Rate**

This sets the number of frames to capture per second. You can choose from the available frame rates.

- **Quality**

Select **Highest** quality to capture high quality video clips. This creates large files, especially when you are recording long clips. To have smaller file sizes, select other quality options.

If you select the **Customized** option, the **Setting** button will be enabled. Click this button to customize advanced video and audio capture settings.

### Customized Settings



- **Video and Audio Bit Rate**

Set the desired video and audio capture bit rate. Higher rate produces better quality, but this will take up more space on your hard drive. If you plan to use the clip for the Web, the recommended settings are 300Kbps for video and 32Kbps for audio. For Video CD authoring, use the standard 1150Kbps for video and 224Kbps for audio. For professional applications that demand best quality output, use 3000Kbps for video and 384Kbps for audio.

- **Aspect Ratio**

Aspect ratio is the proportion of the width to the height of the picture. Choose one of the following aspect ratios: 1:1 (keep

original frame size), 4:3 (resize frame size to TV standard aspect ratio), or 16:9 (resize frame size to wide screen).

- **Sample Rate**

To convert an analog signal to digital, your computer takes measurements of the sound wave's amplitude (a sample) at particular points in time. The more samples the computer takes, the more information it obtains and thus, the closer it comes to capturing something close to the original sound. 44.1 KHz is CD quality sound and is the default setting.

- **Mode**

You have four audio channel choices to choose from for MPEG 1/2: Stereo, Joint Stereo, Dual Channel, and Mono. To obtain high-fidelity and CD quality sound, use Joint Stereo.

 
# Chapter 8 FM Radio (Option)

## FM Radio Controls



Click the **FM Radio** button to listen to your favorite radio station programs.

Use the following button controls for selecting FM radio channels, adjusting volume, scanning FM channels and more.

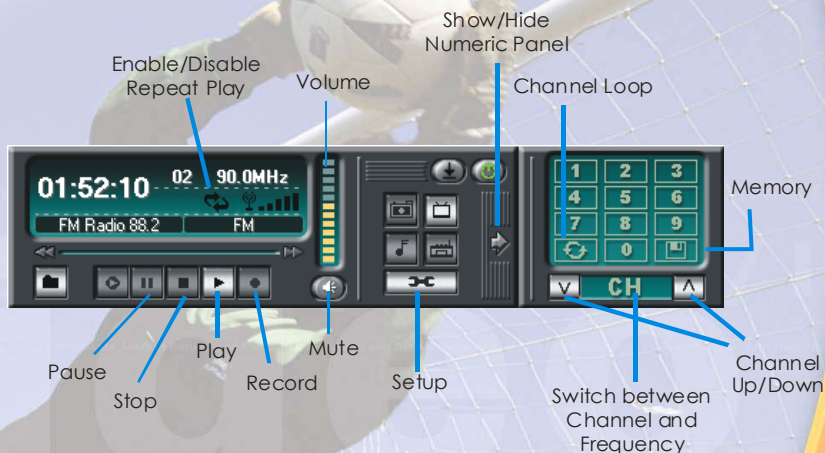


To change back to live TV, click the **Change Video Source** button.

## How to Auto Scan FM Radio Channels

 If this is your first time to use FM radio, perform auto scan to search and memorize active FM radio stations in your area.

To auto scan FM radio stations:

1. If this is your first time to switch to FM radio, the *FM Radio* dialog box will automatically appear.
2. Click the **Auto Scan** button. All active channels will be automatically scanned and memorized. Up to 99 preset channels can be memorized.
3. Click **Finish**.

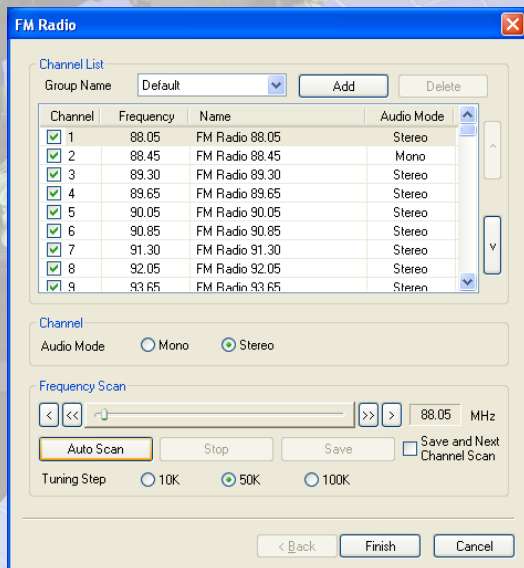




## Manually Scanning Specific FM Channels

Instead of scanning all channels, you can choose to manually scan one or a few channels only. To do this, follow these procedures.





To manually rescan specific FM radio channels:

1. Click the **Setup** button  and click the **FM Radio** tab.
2. To manually scan two or more consecutive channels, you can enable the **Save and Next Channel Scan** check box.
3. Click on the channel you want to rescan in the **Channel List**.
4. Click  to scan upward or  to scan downward from the selected channel frequency. The scanning will stop when the application finds the closest **ACTIVE** FM frequency.
5. Click the **Save** button if you'd like to keep the newly scanned frequency.
6. If the **Save and Next Channel Scan** check box is enabled in Step 2, the application will automatically scan the next succeeding channel each time after pressing the **Save** button. Click the **Stop** button when you want to stop the scanning operation.

## Channel Versus Frequency Selection


You can tune to FM radio by channel or frequency.

By default, the Numeric Panel allows you to select memorized radio channels, as indicated by the **Channel** button  on the panel.

You can switch to selecting radio frequencies by clicking the  button. When you see the button change into the **Frequency** button , clicking on the number buttons on the Numeric Panel allows you to select radio frequencies.

## Selecting a Channel

To select a channel:

Click  to open the *Numeric Panel*.



There are a number of ways to select a channel:

- Click on the **Numeric buttons** to select a channel.

- Click the **Channel Up/Down** button until you reach your desired channel.
- OR,
- Use the **numeric keys** on your keyboard to select a channel.

## Selecting a Radio Frequency

To select a radio frequency:


1. Click the **Channel** button . The button then changes to the **Frequency** button .
  2. There are a number of ways to select a radio frequency:
    - Click the **Numeric buttons** on the Numeric Panel.
    - Click the **Tuning (-)/(+)** button to increase/decrease the radio frequency by 0.1 MHz.
- OR,
- Use the **numeric keys** on your keyboard to enter a radio frequency.

You can save the selected radio frequency to a channel. Refer to the section titled ***Saving a Radio Frequency to a Channel*** for details.

**NOTE:** When selecting a radio frequency, be sure that it is within the acceptable range of FM radio frequencies in your area. If you entered a frequency which is out of range, the **AVerTV** application will disregard this invalid frequency. The application will then automatically tune the FM radio back to the previous frequency.

## Skiping Unwanted Channels

If you want to exclude undesirable channels from your FM channel list, do the following:

1. Click the **Setup** button  and click the **FM Radio** tab.
2. In the *Setup* dialog box, *Channel* column, click the unwanted channel. The check mark will be removed, indicating that the


channel will be excluded from your channel list and that you won't be able to access and hear them through the **Channel Up/Down** button.

Channel	Frequency	Name
<input checked="" type="checkbox"/> 1	63.00	FM Radio 63.00
<input checked="" type="checkbox"/> 2	63.50	FM Radio 63.50
<input checked="" type="checkbox"/> 3	64.00	FM Radio 64.00
<input type="checkbox"/> 4	65.10	FM Radio 65.10
<input checked="" type="checkbox"/> 5	65.75	FM Radio 65.75

## Saving a Radio Frequency to a Channel

To assign a selected radio frequency to a channel:

1. First, select a channel. Refer to the previous section titled *Selecting a Channel* for details.
2. Now select a radio frequency. Refer to the previous section titled *Selecting a Radio Frequency* for details.
3. Click the **Memory** button. The *Input Channel Name* dialog box will then appear.
4. Enter a descriptive channel name and click **OK**.

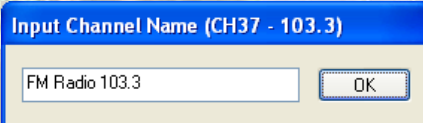
A screenshot of the 'Input Channel Name' dialog box. The title bar is blue with white text 'Input Channel Name (CH37 - 103.3)'. The main area has a light yellow background. It contains a text input field with 'FM Radio 103.3' and an 'OK' button to its right.

Input Channel Name (CH37 - 103.3)

FM Radio 103.3 OK

## Modifying or Adding FM Radio Channels

You can manually add a new FM radio channel if the desired channel cannot be found through scanning operation, or modify any existing FM radio channel.

1. Click the **Setup** button , and then click the **FM Radio** tab.
2. Double click on the **Frequency** and/or **Name** column of the existing or blank FM channel which you want to modify or add.
3. Enter the frequency and the name you want in the provided text box(es), and then press **Enter**.


Channel	Frequency	Name
<input checked="" type="checkbox"/> 70	106.90	FM Radio 106.90
<input checked="" type="checkbox"/> 71	107.30	FM Radio 107.30
<input checked="" type="checkbox"/> 72	107.75	FM Radio 107.75
<input type="checkbox"/> 73	99.85	
<input type="checkbox"/> 74	0.00	

Channel	Frequency	Name
<input checked="" type="checkbox"/> 70	106.90	FM Radio 106.90
<input checked="" type="checkbox"/> 71	107.30	FM Radio 107.30
<input checked="" type="checkbox"/> 72	107.75	FM Radio 107.75
<input type="checkbox"/> 73	99.85	My Favorite
<input type="checkbox"/> 74	0.00	

4. To add or modify more channels, repeat steps 2 to 3.
5. Click **OK** to exit the dialog box.

## Changing the FM Radio Channel Order

You may change the sequence of FM radio channels in the channel list as you prefer.

1. Click the **Setup** button , and then click the **FM Radio** tab.
2. Select the channel which you want to move upward or downward.
3. Click the **UP** or **DOWN** button at the right side until the selected channel reaches the desired location.

Channel	Frequency	Name	Audio Mode
<input checked="" type="checkbox"/> 1	63.00	FM Radio 63.00	Stereo
<input checked="" type="checkbox"/> 2	63.50	FM Radio 63.50	Mono
<input checked="" type="checkbox"/> 3	64.00	FM Radio 64.00	Mono
<input checked="" type="checkbox"/> 4	65.10	Good Night	Mono
<input checked="" type="checkbox"/> 5	65.75	FM Radio 65.75	Mono
<input checked="" type="checkbox"/> 6	66.30	FM Radio 66.30	Mono
<input checked="" type="checkbox"/> 7	67.25	FM Radio 67.25	Mono
<input checked="" type="checkbox"/> 8	67.50	FM Radio 67.50	Mono
<input checked="" type="checkbox"/> 9	68.45	FM Radio 68.45	Stereo


## Setting the Audio Mode

The application will automatically set each FM radio channel to *Mono* or *Stereo* based on the audio mode of the FM radio signals received.



You can change the audio mode of a stereo FM radio signal to *Mono* or vice versa.

To change the audio mode:

1. Click the **Setup** button , and then click the **FM Radio** tab.
2. Click on the channel whose audio mode you want to change.
3. Select the **Audio Mode** option you want: **Mono** or **Stereo**.



 
**Note:** If the audio quality of a FM radio channel is found unstable or a bit poor, you can also try to switch the audio mode between **Mono** and **Stereo** to get a better audio quality.

## Adding and Deleting Channel Groups

Selecting a Channel Group allows you to switch between the channels of the selected group only when pressing the **Channel Up/Down** button. If you want to add or delete an FM channel group, do the following:

To add a new channel group:

1. Click the **Setup** button , and then click the **FM Radio** tab.
2. Click the **Add** Button.



3. The *New Group Name* dialog box will appear. Type in the group name you want and then click **OK**.
4. Now you can start to scan FM radio channels and manage the scanned FM data for this new channel group. For more information, refer to [How to Auto Scan FM Radio Channels](#) and other titles respectively.
5. To add more channel groups, repeat steps 2 to 4.

To delete a channel group:

1. Click the **Setup** button , and then click the **FM Radio** tab.



2. From the *Group Name* drop-down list, select the name of the group you want to remove.
3. Click **Delete** to remove the selected group.



Group Name	<div>My Favorite</div> <div>Default</div> <div>My Favorite</div>
------------	--

## Tuning the FM Radio Frequencies

You can tune the FM radio for better signal reception if the reception is not clear. First, select or go to the channel which you want to tune. Then do one of these three ways.

- Click the **Tuning (+)/(-)** buttons on the FM Control Panel.


OR click the **Setup** button , choose the **FM Radio** tab, and do one of the following:

- Click  or  to increase/decrease the frequency and then click the **Save** button.

Drag the slider (in the **Frequency Scan** section) to the location you want and then click the **Save** button.



## Specifying the Tuning Increment

You can choose to tune the FM frequency by 0.1, 0.05 or 0.01MHz.

1. Click the **Setup** button , and then click the **FM Radio** tab.
2. Select **10K** (0.01MHz), **50K** (0.05MHz) or **100K** (0.1MHz) as your tuning increment.

 
Tuning Step	<input type="radio"/> 10K	<input type="radio"/> 50K	<input checked="" type="radio"/> 100K
-------------	---------------------------	---------------------------	---------------------------------------

3. Click **OK**.


Afterward when you click the **Tuning (+)/(-)** buttons or  /  in the **FM Radio** tab, the frequency will increase/decrease based on the **Tuning Step** you have specified.


## Playing the Recorded Audio

To play back the recorded audio files:

- Click the **Play** button  to play back.

OR,

 
- (1) To play the recorded audio files one after another, click the **Open File** button  to display the *Open File List* window. All the recorded files are listed at the bottom pane of the *Open File List* window. This is the default playlist of recorded files.
- (2) To delete files from the playlist, select them from the list in the bottom pane and click **Delete**, or click **Delete All** to delete all files in the playlist.
- (3) To add more audio files to the playlist, first navigate the *Look in* field on the top pane to find the folder that contains the desired audio files. When you have located the folder, the media files will then be displayed on the top pane. Select files that you want and then click **Add**, or click **Add All** to add all media files in the folder to the playlist.

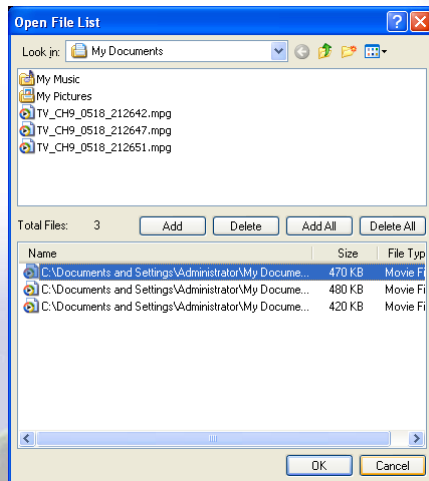





- (4) To start playback, simply click **OK**. The application will start playing each file in the playlist.

## Using the FM Time Shift Function

You can use the Time Shift function to perform background recording of an FM radio program and even replay.

1. Click the **Time Shift** button . You can now leave your computer and let the application record the FM program.
2. When you're back and want to replay, use the **Playback Seek** slider bar to move back to the part where you left off. Click and drag the slider tab to the left until you hear the part of the show where you were listening earlier, then release the mouse button to replay from there.



 
3. You can also click the **Backward** button  to move backward in fixed intervals until you reach the part where you left off.
4. To advance forward and skip some parts of the recording (for example FM commercials), drag the slider tab to the right. You can also click the **Forward** button  to move forward in fixed intervals.
5. To temporarily pause the playback, click the **Pause** button.  Click the **Pause** button again to resume.
6. To return to real-time FM radio program, click the **Stop** button.  This switches off the Time Shift function and returns you to live FM radio.

**Note:** The application will create a temporarily recorded file when the Time Shift function is being performed for FM radio. This file will be removed when you click the **Stop** button  and return to real-time FM radio mode.

# CHAPTER 9 Scheduler

The **Scheduler** application allows you to create a list of preset schedules for watching, recording your favorite TV programs or performing Time Shift function. You can set the day and time to turn on the TV program and the length of recording.

To run this application, click **Scheduler** from the **AVerTV** program menu or right-click the **Quick TV** launcher located at the lower right corner of the screen then in the list menu, select **Scheduler**.

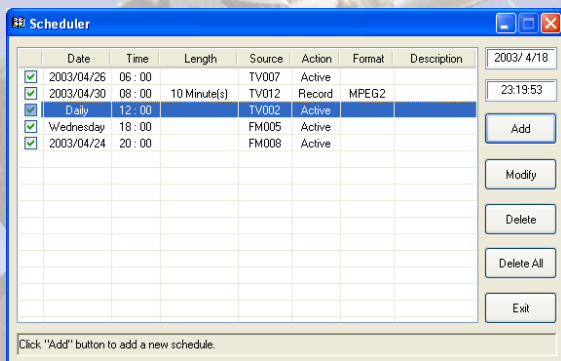

## Schedule Listing

This displays a list of preset schedules you have created.

## Modify

Select a preset schedule and click this button to make changes.

## Delete / Delete All

Click this to delete selected / all schedules.

## Exit


Click this to exit Scheduler.



## Adding and Deleting Schedules

To create a new schedule:

1. Click the **Add** button in the *Scheduler* dialog box.
2. The following dialog box will then appear:

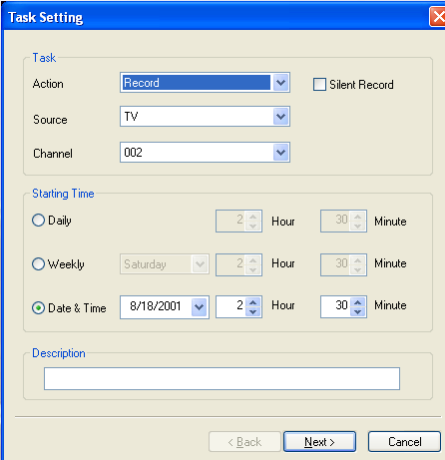The image shows a 'Task Setting' dialog box with a blue title bar and a close button. It contains three main sections: 'Task', 'Starting Time', and 'Description'. The 'Task' section has a dropdown for 'Action' set to 'Record', a 'Silent Record' checkbox, a 'Source' dropdown set to 'TV', and a 'Channel' dropdown set to '002'. The 'Starting Time' section has three radio buttons: 'Daily' (selected), 'Weekly' (with a 'Saturday' dropdown), and 'Date & Time' (with a date dropdown set to '8/18/2001'). Each radio button has associated hour and minute spinners. The 'Description' section has a text input field. At the bottom are '< Back', 'Next >', and 'Cancel' buttons.

**Task Setting**

**Task**

Action: **Record** ☐ Silent Record

Source: **TV**

Channel: **002**

**Starting Time**

☒ **Daily** 2 Hour 30 Minute

☐ **Weekly** Saturday 2 Hour 30 Minute


☐ **Date & Time** 8/18/2001 2 Hour 30 Minute

**Description**

< Back Next > Cancel

3. From the *Action* drop-down list, select **Active** to watch TV/listen to radio or select **Record** to save a program for future viewing. Otherwise, select **Time Shift** to start the Time Shift function.

 
☒ **Note:**

If the **Silent Record** check box is enabled, when the application is performing the recording task, the icon  will appear on the task bar (the lower right corner of the screen). To immediately watch or listen to the TV/FM program which is being recorded, just double-click this icon.

4. From the *Source* drop-down list, select **TV**, or an external video source.
5. In the *Channel* option, select the TV channel where your favorite program is on. (If you chose an external video source, this option will be disabled.)

6. Then set the time to tune in a live program, perform recording or Time Shift. You can set the schedule on a **Daily** or **Weekly** basis or on a specific **Date & Time**.
7. Type in a description, e.g., the name of a TV program in the provided text box. Or, you may just leave it blank.
8. If you select **Active** or **Time Shift** in step 3, click **Finish**. Or click **Next** if your choice is **Record** in step 3.
9. When you click **Next**, the *Record Format* dialog box then appears. Choose the file format and customized settings for recording and click **Next**.
10. In the *Record Storage* dialog box, specify the length of recording. If you intend to burn the recorded files to VCD or DVD, choose whether to slice the file size to fit the target disc capacity from the **Split File Size** drop-down list.

In the *After-Recording Schemes*, it automatically switches to the selected power control mode when the schedule recording is completed. Choose an appropriate power control status listed below:



- Watch TV : Switch to real-time TV mode.
- Close TV : Turn off the AVerTV Application.
- Standby : Turn off your monitor and hard disks.
- Hibernate : Save everything and then turn off your computer.
- Shut down : Turn off your computer.

11. Click **Finish**.

☒ **Note:**

Please make sure that you have cleared “*Prompt for password when computer goes off standby*” in **Advance** tab of Windows® **Power Option**. (To open Power Option, click **Start**, point to **Settings**, click **Control Panel** and double-click **Power Option**.)

Therefore, the application can bring your computer out of Standby or Hibernate automatically when performing a scheduled task.

# CHAPTER 10 Hot Keys


Hot Key	Description	Function
UP/DOWN ARROW	Channel or Frequency Up/Down	Press to go to the next upper/lower TV channel, FM channel, or radio frequency.
L	Channel Loop	Press to go to the previously accessed TV channel, FM channel, or radio frequency.
NUMERIC KEYS	Channel or Frequency Selection	Use NUMERIC KEYS to directly enter the TV channel number, FM channel number, or radio frequency.
ESC	Stop or, Change back to Normal View	Stop (playback, recording, Time Shift, 16-channel preview, or channel scan). Or, change full screen back to normal view.
F1	Help	Open the on-line help.
F5	Full Screen	Show TV/Video in full screen.
F6	Display (OSD) information	Display On-Screen Display information.
+/- (on your numeric keypad)	Volume	Press to increase or decrease the volume level.

Hot Key	Description	Function
LEFT/ RIGHT ARROW	Rewind/ Fast Forward	Press to rewind or fast forward (for playback and Time Shift).
A	Audio Mode (TV only)	Choose between the available audio types.
D	Show/Hide TV Monitor Panel	Toggles between showing and hiding the panel on the TV monitor window.
F	Freeze	Freeze playback.
M	Mute	Turn off/on the sound.
Ctrl + N	Play Next File	Play the next file in the playlist.
Ctrl + P	Play Previous File	Play the previous file in the playlist.
Ctrl + R	Record	Start recording.
P	Play / Pause	Play/pause (playback, Time Shift).
S	Snapshot	Capture an image (or a continuous sequence of images).
Ctrl + T	Time Shift	Enable the Time Shift function.
V	Change Video Source	Change between TV and the external video source.

# CHAPTER 11 CUSTOMER SERVICE

The AVerTV utility provides a convenient tool, which allows users to contact AVerMedia's customer service department easily via the e-mail for any troubleshooting requests.

To contact the customer service for troubleshooting:

1. Click the **Setup** button  and click the **System Information** tab.
2. You will see all of your system's information is listed under this tab.
3. Select the e-mail address which is near or in your country from the *Office* drop-down list, and then click **Send** to e-mail the system information.

